

Fitting Instructions for Isuzu Sunvisor


(Part No. 07023 & 07024)



- 1. Remove the LHS light cover and unscrew the light base, exposing the wires.**




2. Place sunvisor in position and mark the bolting positions on the cab.

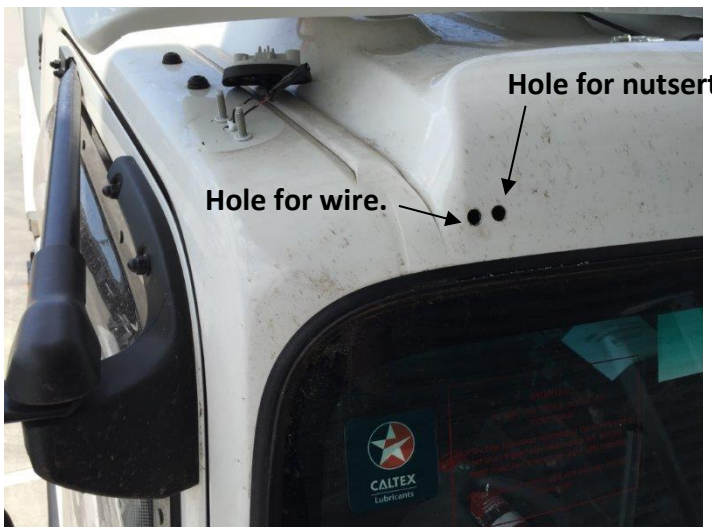

3. Drill these holes to 11mm. Seal with sealastic and fasten an M8 nutsert in each of the 4 mounting holes. Screw the M8 studs into each nutsert.



4. Clean the area around each stud and place a rubber pad over each stud.

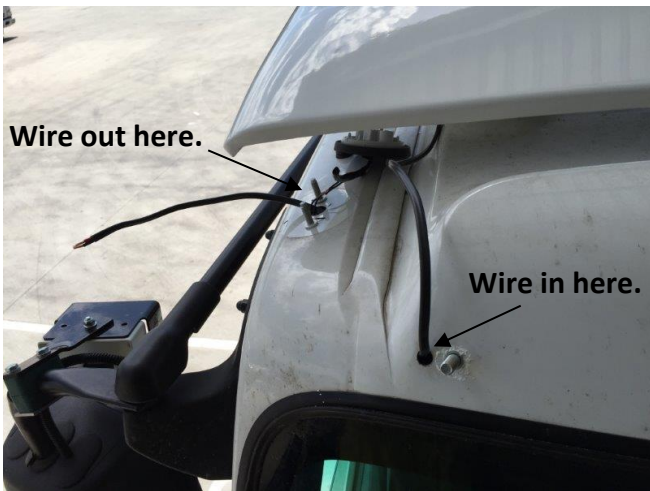


5. Thread the sunvisor wire through the drilled hole and out through the roof light hole. Place sealant around the drilled hole.

Place the sunvisor over the four studs and tighten to the cab using the 8mm whizlock nuts.



6. Drill and screw the lights to the sunvisor.

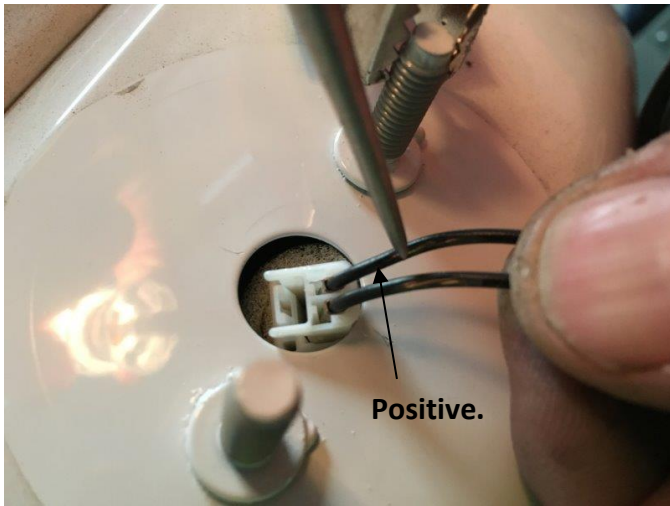

7. Test the wires for positive using a test light.



8. Connect the wires to the cab using a soldering iron.



9. Place heat shrink or tape around the exposed wires.

10. Replace the light base and light cover.



Parts List for 07023 & 07024 sunvisor

<u>Part No.</u>	<u>Description</u>	<u>Qty</u>	
Nutsert8	M8 Nutsert	4	} in a magic seal bag
K7023/01	M8 x 40 steel stud	4	
K7023/07	8mm whizlock nuts (Zn)	4	
KGasket/FSP	Rubber gaskets	4	
K7023/02	8g x ½" self tapper	8	in a magic seal bag