


Fitting instructions MK Condor Fuelscoop Part No:
01013UDMK-C, 01014UDMK-C, 01017UDMK-C
Fridgescoop 01026UDMK-C



1. Remove 8 bolts in cab roof.

2. Clean cab roof in areas where the double sided tape will contact using Tite-R-Bond.

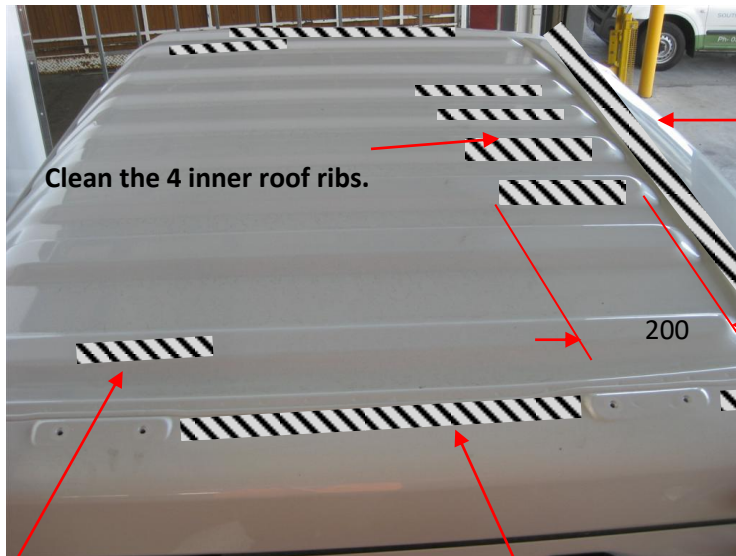

Clean the 4 inner roof ribs.


Clean across the front of the cab.

Clean the outer ribs here.

Clean between the bolt holes.

Clean in front of the bolt holes.

3. Peel protective film off the edges of the double sided tape to allow for easy removal once Fuelscoop Plus is sitting on the cab.

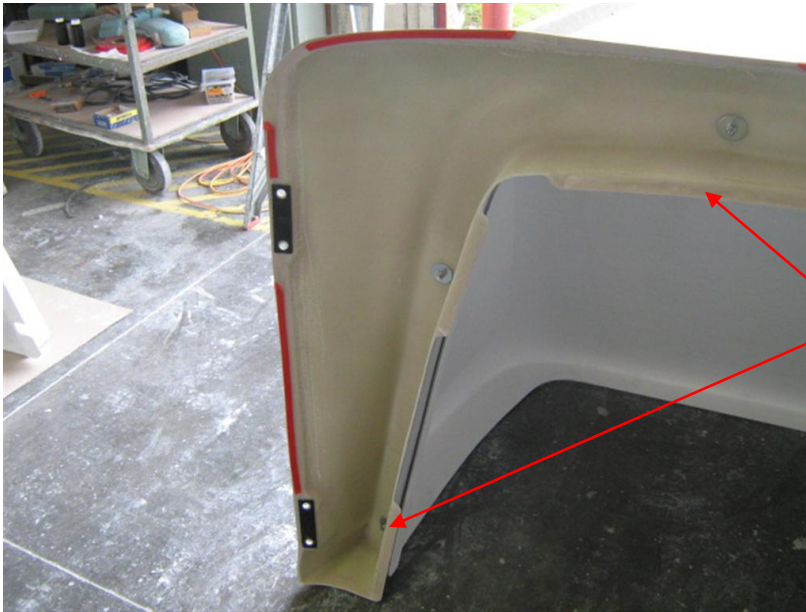


Peel protection film off completely on the inside of the scoop.

4. Peel red protective film edges back only on the outside of the scoop. Tape the ends of the protection film to the scoop for easy access.





5. Place Fuelscoop Plus on cab roof in position. Sit Fuelscoop Plus on packers so the double sided tape does not touch the roof.

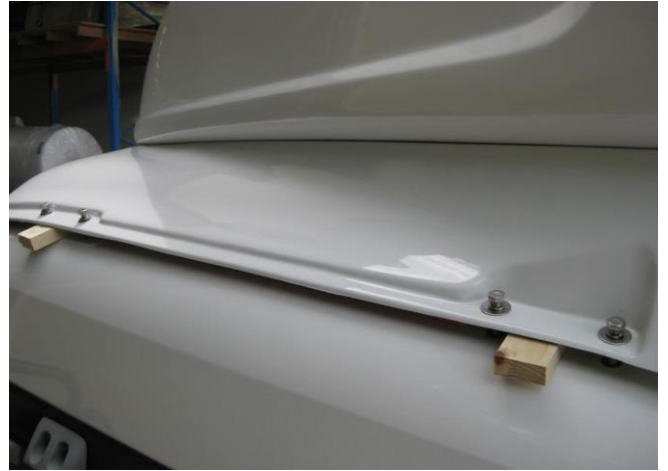

6. Loosely screw 8 x 40mm bolts in position. You may need to enlarge some holes so the bolts fit.



7. Remove protective film from the double sided tape and allow the Fuelscoop Plus to fall to the roof.

Press down firmly around the flanges to ensure the double sided tape has good contact with the cab roof.

Tighten bolts.

