


**Fitting Instructions Fuelscoop Part No: 01015-Quon,
01016-Quon & 01018UD-Quon
Fridgescoop 01026UD-Quon**




1. Remove 8 bolts in cab roof.

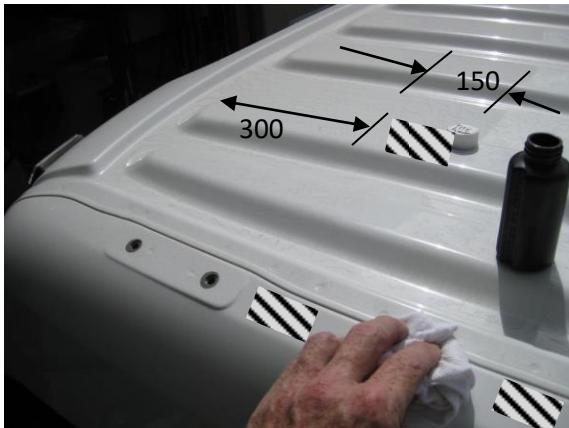

2. Clean cab roof in areas where the double sided tape will contact.



2b

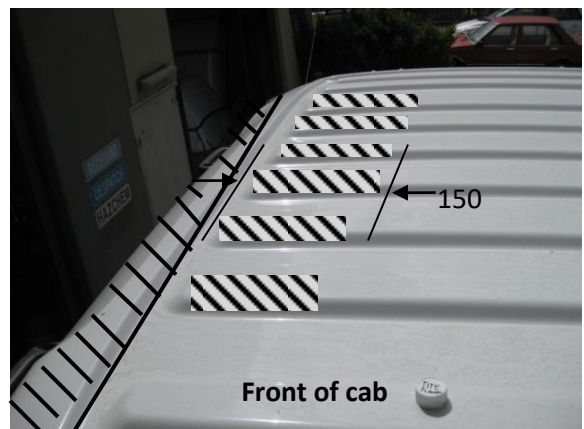

2c



Peel edges back only on the outside of the scoop.

Peel protection film off completely on the inside of the scoop.


3. Peel protective film off the edges of the double sided tape to allow for easy removal once Fuelscoop Plus is sitting on the cab.



4. Tape the ends of the protection film to the scoop for easy access.



5. Place Fuelscoop Plus on cab roof in position. Sit Fuelscoop Plus on packers so the double sided tape does not touch the roof.

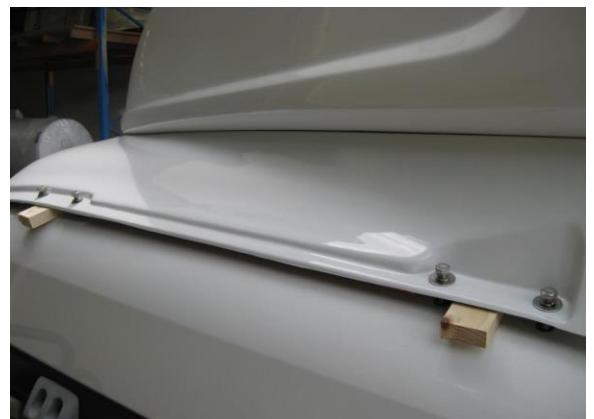

6. Loosely screw 8 x 40mm bolts in position. You may need to enlarge some holes so the bolts fit.



7. Remove protective film from the double sided tape and allow the Fuelscoop Plus to fall to the roof.

Press down firmly around the flanges to ensure the double sided tape has good contact with the cab roof.

Tighten bolts.



8. Clean Fuelscoop and cab.

PARTS LIST FOR 01015, 01016, 01018, 01026 UD Quon

PART No	DESCRIPTION	QTY
1. 01016UD Quon	Fuelscoop	1
2. FK 01016 Quon	Fitting kit	1

Fitting Kit

1. To fit 01016UD Quon to cab of roof.

2.

<input type="checkbox"/> K405/40	8mm x 40mm Hex Hd Set Screw	8
<input type="checkbox"/> K101/10	5/16" x 1' Flat Washer	8
<input type="checkbox"/> K101/05	5/16" Spring Washer	8

3. TITE-A-BOND

50ml