


**FITTING INSTRUCTIONS FOR UD PK CONDOR &
CRONER KIT
PART NO. 04122C & 04122CR**



1. Remove 8 bolts in cab roof.

2. Clean cab roof in areas where the double sided tape will contact using Tite-R-Bond.

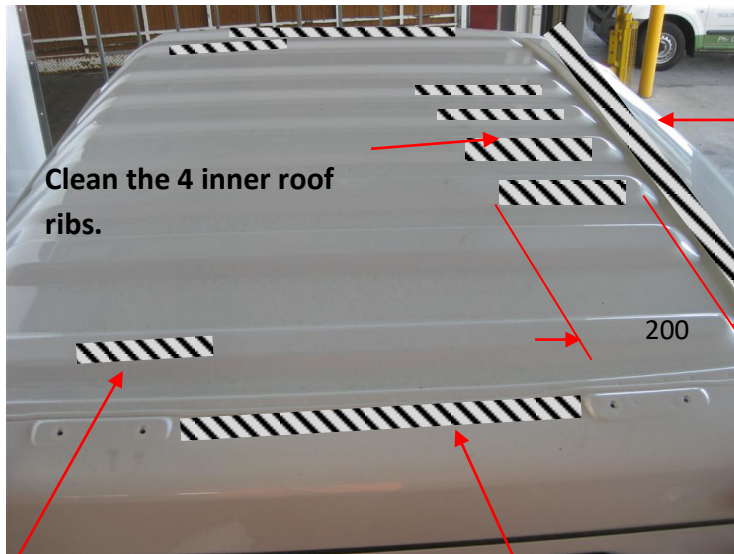

Clean across the front of the cab.

Clean the 4 inner roof ribs.

200

Clean the outer ribs here.

Clean between the bolt holes.

3. Peel protective film off the edges of the double sided tape to allow for easy removal once Fuelscoop Plus is sitting on the cab.




Peel protection film off completely on the inside of the scoop.

4. Peel red protective film edges back only on the outside of the scoop. Tape the ends of the protection film to the scoop for easy access.





5. Place Fuelscoop Plus on cab roof in position. Sit Fuelscoop Plus on packers so the double sided tape does not touch the roof.

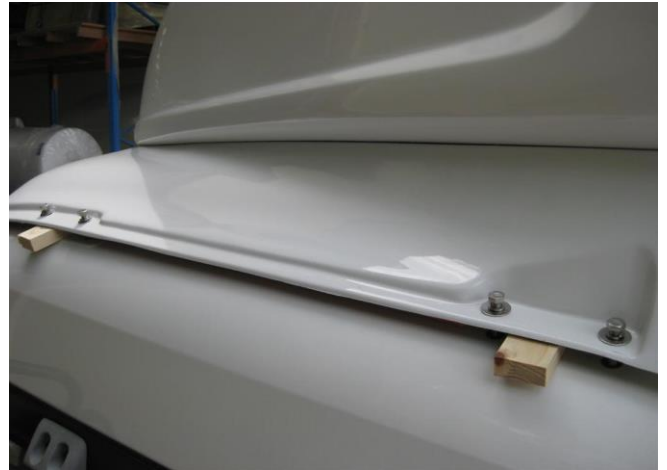

6. Loosely screw 8 x 40mm bolts in position. You may need to enlarge some holes so the bolts fit.



7. Remove protective film from the double sided tape and allow the Fuelscoop Plus to fall to the roof.

Press down firmly around the flanges to ensure the double sided tape has good contact with the cab roof.

Tighten bolts.



2. Clean Fuelscoop Plus and cab.

Fitting Kit

- | | | | |
|-----------|--|---|----------------------------------|
| 1. | <input type="checkbox"/> K405/40
<input type="checkbox"/> K101/10
<input type="checkbox"/> K101/05 | 8mm x 40mm Hex Hd Set Screw
5/16" x 1" Flat Washer
5/16" Spring Washer | 8
8
8 |
| 2. | TITE-A-BOND | | 50ml |

04121CR/2/3 Lower Extenders & 04121C/5/6 Upper Extenders.



1. Hold the rear side extender in position and clamp it to the vertical rib on the rear of the cab.



2. Mark the nutsert hole on the rear of the cab.



3. Remove the extender. Drill and fasten the 3 nutserts down the rear of the cab.



4. Replace the extender and bolt it to the cab using the 8mm set screws into the nutserts.



Clamp the extender to the vertical lip using the clamp sets provided.



5. Remove the air intake and repeat the procedure for the RHS lower extender.



6. Ensure the upper clamp set is as close to the gutter as possible.

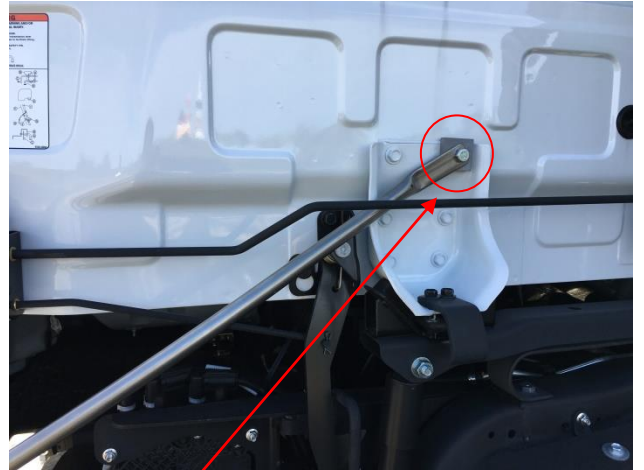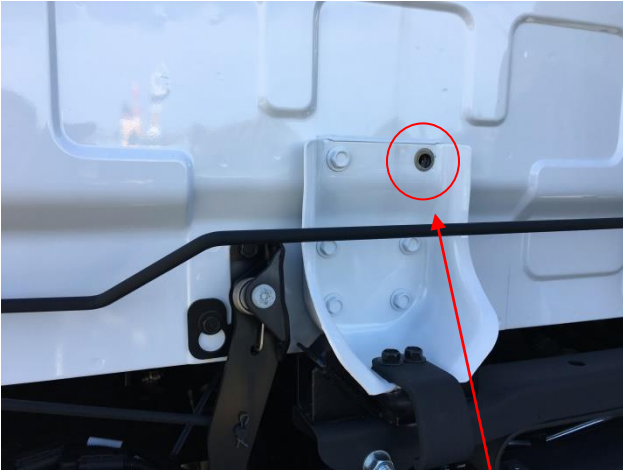

10. For the LHS lower extender brace, remove 10mm bolt and fasten lower extender braces to the cab and extender with the bolts, washers and spacers provided.



11. Repeat for the RHS lower extender brace.



12. The extender upper braces are clamped to the rear gutter.



13. Clamp the upper extenders in position, then drill and bolt them to the rear of the roof device and top of the lower extenders.



	PART No	DESCRIPTION	QTY
1.	01016UDCR	Fuelscoop	1
2.	04121CR/2	Lower extender (o/side)	1
3.	04121CR/3	Lower extender (n/side)	1
4.	04121/5	Upper extender (o/side)	1
5.	04121/6	Upper extender (n/side)	1

1. TO FIT FUELSCOOP PLUS TO CAB ROOF;

K405/40	8mm x 40mm HEX HD SET SCREW (s/s)	8
K101/05	5/16" SPRING WASHER	8
K101/10	5/16" x 1" FLAT WASHER	8

2. Tite-R-Bond Surface Cleaner 50ml

3. TO MOUNT THE 04122CR/2/3 EXTENDERS TO THE REAR OF THE CAB.

K405/25	8mm x 25mm hex hd set screw	6	} In a magic seal bag
K101/10	5/16"x1" Flat washer	6	
K101/05	5/16" spring washer	6	
K/NUTSERT8	8mm Nutsert	6	
K434/01A	Extender Clamp (A)	4	} In a magic seal bag
K434/01B	Extender Clamp (B) (No rubber)	4	
K405/40	8mm x 40mm HEX HD SET SCREW (s/s)	4	
K101/10	5/16"x1" Flat washer	8	
K405/26(Zn)	8mm Nyloc nut (Zn)	4	

4. TO MOUNT THE UPPER EXTENDER BRACES TO THE REAR OF THE CAB.

K434/01A	Extender Clamp (A)	2	}	assembled
K434/01B	Extender Clamp (B) (No rubber)	2		
K405/40	8mm x 40mm hex hd set screw (s/s)	2		
K101/10	5/16"x1" Flat washer	4		
K405/26(Zn)	8mm Nyloc nut (Zn)	2		
KBRACE540	540mm Brace	2		
K405/25	8mm x 25mm hex hd set screw	2	}	In a magic seal bag
K101/10	5/16"x1" Flat washer	4		
K405/26	8mm Nyloc nut	2		
K4122/34	10mm Nylon washer	2		

5. TO MOUNT THE LOWER EXTENDER BRACES TO THE REAR OF THE CAB .

K403/23	10mm spring washer	2		
KMAN/07	PVC Spacer	2		
K101/40	10mm x 1.25 x 40mm Hex Hd Set Screw	2		
K431/02	Upper O/S Brace (bent to suit)	2		
K405/25	8mm x 25mm hex hd set screw	2	}	In a magic seal bag
K101/10	5/16"x1" Flat washer	4		
K405/26	8mm Nyloc nut	2		
K4122/34	10mm Nylon washer	2		

8. TO BOLT THE UPPER EXTENDERS TO THE REAR FLANGE OF THE ROOF DEVICE AND THE TOP FLANGE OF THE LOWER EXTENDERS.

K405/25	8mm x 25mm hex hd set screw	12
K101/10	5/16"x1" Flat washer	24
K405/26	8mm Nyloc nut	12