


Fitting instructions for Iveco Daily
Aerokit
Part number: 04102 & 04102-15



1. Place the roof device on cab roof and hold the cab extenders in position. This will give you the working area of the cab to be prepared.




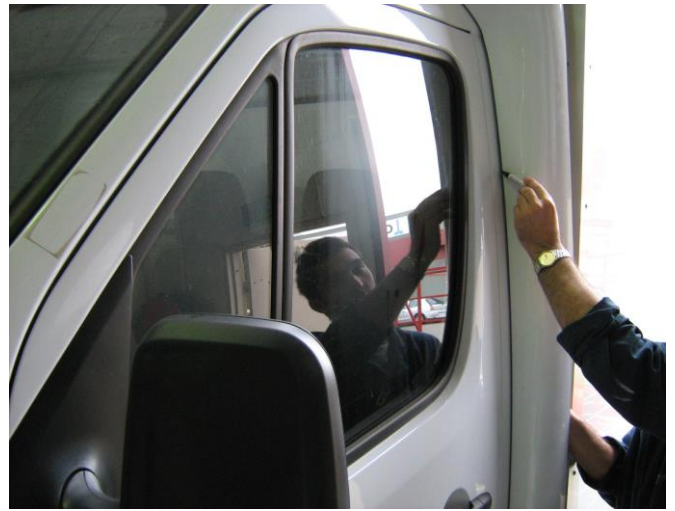

2. Mark the outline of the kit onto the cab.



3. Lightly abrade the cab surface using 240 grit sandpaper 10mm inside the outline of the kit. Apply a heavy line of Urethane glue to the cab roof in the areas shown, then clean the text lines off.

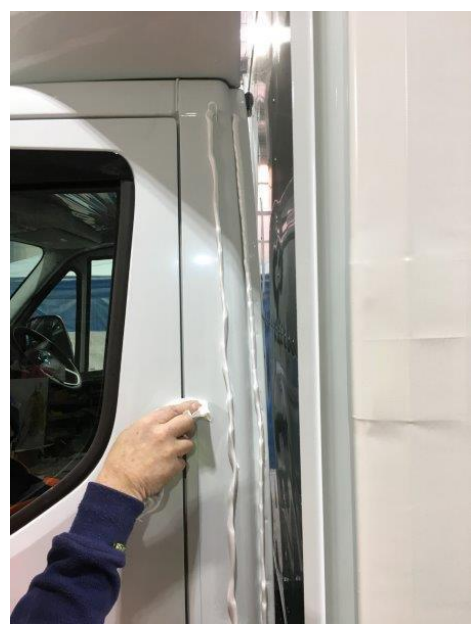

4. Repeat the process for the extenders. Hold the extenders in position using tape.

5. Speed file the rear edge of the extenders to ensure it is smooth.





6. Clean down kit and cabin.

Each Iveco Daily Kit consists of:

1. 04121/1 Iveco Daily roof device
2. 04102/2 Iveco Daily extender (o/s)
3. 04102/3 Iveco Daily extender (n/s)

4. 600ml tube of Bostik urethane glue